

GEDORE


TOOLS FOR LIFE

Bowden Cable

spare part for KL-0121-25



KL-0121-2501

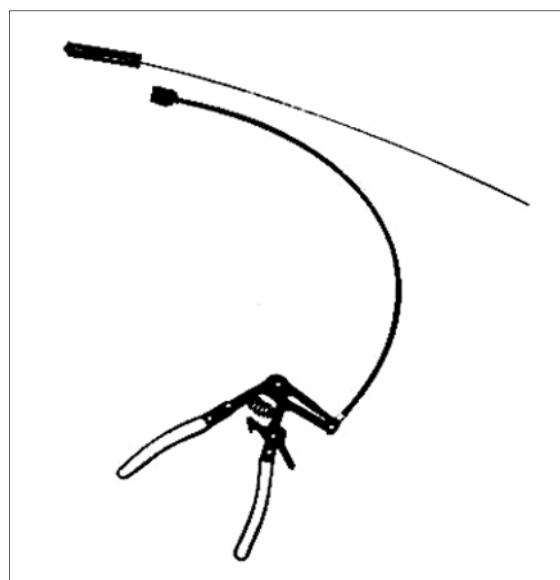

6e090717_g.docx

GEDORE Automotive GmbH

Breslauer Straße 41
78166 Donaueschingen

Postfach 1329
78154 Donaueschingen - GERMANY

Tel.: +49 (0) 771 / 8 32 23-0
Fax: +49 (0) 771 / 8 32 23-90

E-Mail: info@gedore-automotive.com
Internet: gedore-automotive.com

KL-0121-2501



Application:

Fig. 1: Cut wire rope.

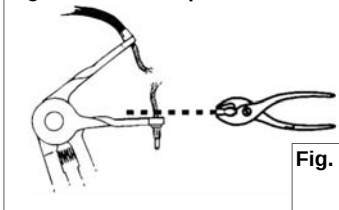


Fig. 2: Punch out wire clamp.



Fig. 3: Extract old wire rope.

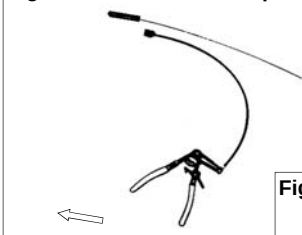


Fig. 4: Remove old cable sheathing.



Fig. 5: Insert new cable sheathing.

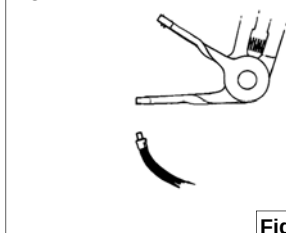


Fig. 6: Mount hose clip head with spring on wire rope.



Fig. 7: Insert new wire rope.


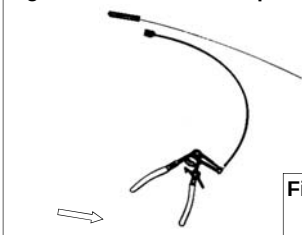


Fig. 8: Fix wire rope.

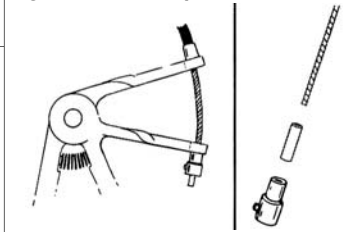

KL-0121-2501 - Bowden Cable

spare part for KL-0121-25

Suitable for KL-0121-25 - hose clip pliers with remote operation.

Application

1. Cut wire rope directly at the wire clamp (**fig. 1**).
2. Punch out the remaining wire clamp with an appropriate drift (**fig. 2**).
3. Extract the old wire rope and the old hose clip head (**fig. 3**).
4. Punch out the old cable sheathing with an appropriate drift (**fig. 4**).
5. Insert the new cable sheathing (**fig. 5**).
6. Mount the new hose clip head and the new spring on the new wire rope (**fig. 6**).
7. Insert the new wire rope (preassembled as in step 6) into the cable sheathing (**fig. 7**).
8. Push the brass tube along with the wire clamp onto the wire rope and tighten the screw (**fig. 8**).

Note: Tension the wire rope so that the new hose clip head is entirely closed when the pliers are completely shut.



Warnings and Notes

- Always wear protective goggles!
- Only **GEDORE Automotive** Original spare parts are recommended.